

Jude Bookcase

USA Item #: U036-0

Australian Item #: 1593



Made in Vietnam for:
Incy Interiors Pty Ltd
2a Piper Street, Bathurst, NSW, 2795
AUSTRALIA
1300 94 20 50
www.incyinteriors.com.au

Designed and Distributed in Australia by:
Incy Interiors Pty Ltd
2a Piper Street, Bathurst, NSW, 2795
AUSTRALIA
1300 94 20 50
www.incyinteriors.com.au



WARNING

ALL DRESSERS CAN TIP WHEN YOU OR YOUR CHILD LEAN ON THE OPEN DRAWERS. INJURY COULD RESULT. YOU MUST INSTALL THE ANTI-TIP STRAP ~ SEE USER MANUAL

FOR INSTALLATION BOOKCASE MUST BE PLACED ON LEVEL SURFACE

Care & Maintenance

- When cleaning your bookcase, use a non-toxic, non-abrasive cleaner. Mix a solution of water with a small amount of a mild detergent. Apply to bed surface with a damp cloth.
- When moving the bookcase assembled, always lifts the unit. Do not push or drag it to avoid damaging the base.
- It is important that the humidity levels in the room be controlled from extremes of too much humidity or too little. The bookcase should not be placed directly next to air-conditioning, outlets, fire places, radiators, space heaters, humidifiers, or dehumidifiers. Exposure to extreme variations of temperature and humidity can damage wood products.
- Keep bookcase out of direct sunlight. UV rays may fade colours and in some cases darken them. It can cause crazing or hair line cracks in the finish. White finishes will darken naturally over time and exposure to direct sunlight will hasten this natural process along with some wood darkening; this is not considered to be a quality defect.
- If you need to put your bookcase in storage for any period of time do not store it in a damp or hot environment. Allow air flow around the furniture and do not stack anything on it.

Check List

- Always check the bookcase is free from damage before use. Do not use product if any damage is present.
- Regularly check that all assembly fittings are always tightened properly and retighten as necessary.

After Sales Customer Service

When you receive your Incy Interiors product, if you need any assistance or if you have any comments with respect to any aspect of the goods, please contact your local distributor via email.

If you are missing parts you can order parts by writing to the address below or call 888 –623 –5044. Please include the product name, colour, and a brief description of the part you are missing.

You can also visit our website at www.incyinteriors.com for latest product information.


For service in United States:

Incy Interiors Pty Ltd
C/- ATC International
859 East Sepulveda Blvd
Carson, CA 90745 USA
Ph 888 –623 –5044
www.incyinteriors.com


For service in Australia:

Incy Interiors Pty Ltd
2a Piper Street, Bathurst, NSW, 2795
AUSTRALIA
1300 94 20 50
www.incyinteriors.com.au


Parts list

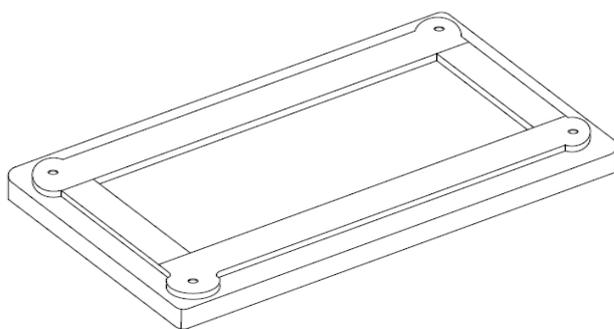


Ax1

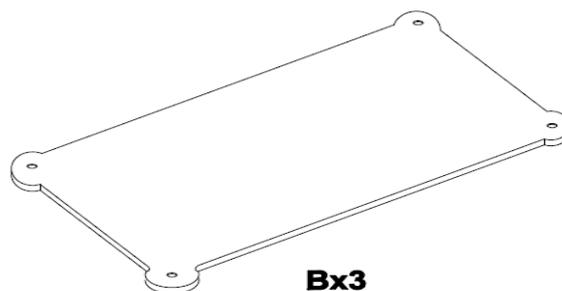

Bx3

 

C1x4

 

C2x8



Dx4

Assembly Instructions

Tools Necessary: None

Step 1:

- Lay bookcase (part a) on a soft surface (ie carpet/rug)
- Screw 4 x spindle legs (part c1 - 25mm thread) into the bookcase top (part a)

Step 2:


- Attach bookcase shelf (part b) to the spindle legs you have just attached
- Screw 4 x spindle legs (part c2 - 40mm thread) into bookcase shelf (part b)


Step 3:

- Attach bookcase shelf (part b) to spindle legs you have just attached
- Screw 4 x spindle legs (part c2 - 40mm thread) into bookcase shelf (part b)


Step 4:

- Attach bookcase shelf (part b) to the spindle legs you have just attached
- Attach remaining bookcase shelf (b) to spindle legs you have just attached
- Screw in 4 x feet (part d)
- Tip the bookcase to the upright position

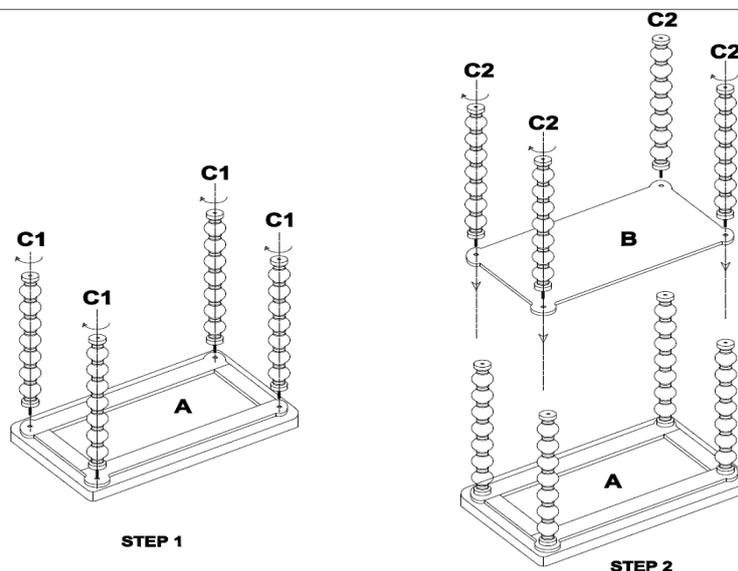

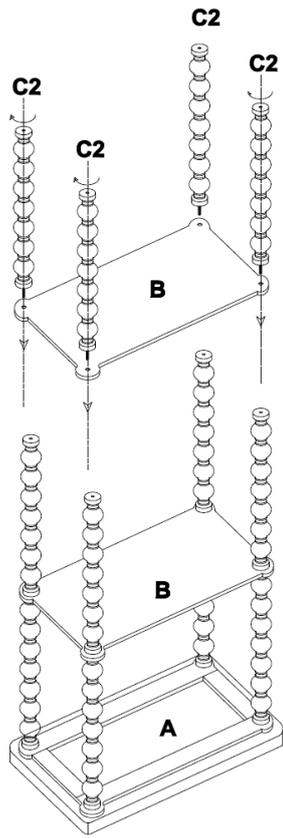

STEP 3

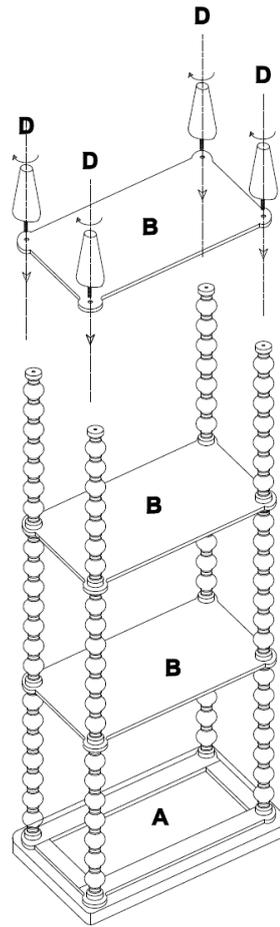

STEP 4